



 
ITEM # Q4-03



nextar 

AUTOMOTIVE NAVIGATION SYSTEM (GPS)

Important Safety Instructions

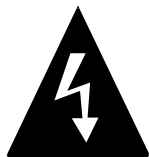

CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN!**



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USE-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OF MOISTURE.

POWER SUPPLY:

Connect the supplied adaptor to the side of the unit in the USB port. Plug the two-prong end of the power cord to an AC100-240V outlet. If you have difficulty inserting the plug, turn it over and reinsert it. If the unit is not used for a long time, disconnect the plug from the outlet.

NOTE:

Before plugging the power cord into an AC outlet, make sure that all the connections have been made.

CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

Refer to service manual for servicing instructions. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

Important Safety Instructions

NOTES

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with a damp cloth.
- 7) Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15) Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.



To prevent the GPS from being damaged, be sure to keep the GPS out of direct sunlight or heat.

Important Safety Instructions

Warning

Failure to avoid the following potentially hazardous situations may result in injury or property damage.

The unit is designed to provide you with route suggestions. It does not reflect road closures or road conditions, traffic congestion, weather conditions, or other factors that may affect safety or timing while driving.

Use the unit only as a navigational aid. Do not attempt to use the unit for any purpose requiring precise measurement of direction, distance, location, or topography. This product should not be used to determine ground proximity for aircraft navigation.

CAUTION:

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

The batteries (or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Important Safety Instructions



Note: This equipment has been tested and found to comply with limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and the receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
3. Consult the dealer or an experience radio/TV technician for help.

The images in this manual are for reference only and they may appear different from the actual items.

Accessories

Accessories List

ITEM	NAME	QTY
	Instruction Manual	2
	AC Adaptor	1
	Car Adaptor	1
	Mounting Bracket	1
	USB Cable	1
	Mounting Cradle	1
	Stylus	1
	Dashboard Mount Disk	1
	SD Card	1
	Pouch	1


NOTE

Accessories and their part number are subject to modification without prior notice due to improvements.

Contents

Important Safety Instructions	1
Accessories	5
View of Main Unit	7
System Connections	8
Power supply Preparation	10
General Setup	12
Playing Music	17
Photo Viewer	19
Use of the Mount Accessories	22
Troubleshooting	23
Specifications	25

 View of Main Unit

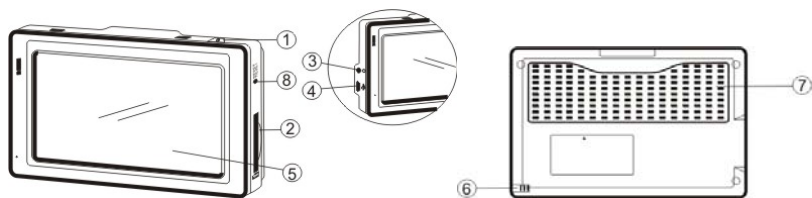

1. POWER Button

Press for a longer time to enter or exit the standby mode.

2. Card Slot

Insert the SD card into the slot.

3. Earphone Jack

Connect earphone for private listening. When the earphone is connected to this jack, the speaker will be turned off automatically.

4. USB Port

Connect to the supplied adaptor to charge the unit.

Used to connect to the USB device.

5. LCD Screen

Finger touches the screen directly or use the touch pen included for optional.

6. Stylus

7. Speaker

8. Reset

Use the stylus press the reset slot, then you can reset the device.

System Connections

- Always ensure that the unit and any other external device connected to the unit are switched off and unplugged from the power supply before you attempt to connect the unit to any external device.

Inserting SD Card

 
The unit is designed with an SD Card slot which allows you to insert an SD card into the unit as shown below:



To remove the card, gently press the card in with your fingernail. The card unlocks and protrudes slightly. You can now remove the card.

Connecting to Earphones

Connect the earphones to the left side of the unit for private listening.

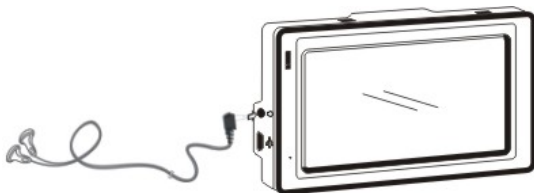

When earphone is connected, the speakers will automatically turn off.

 
Note: Overly loud volume could damage your hearing. So turn down the volume before you connect the earphones, and then raise the volume to a comfortable level.

Power Supply Preparation

Using the AC Adaptor

The unit is supplied with an AC adaptor for powering and charging its battery.

1. Connect AC adaptor to the left side of the unit in the USB port, as shown on the right.
2. Plug the two-prong end of the power cord into a grounded electrical outlet.

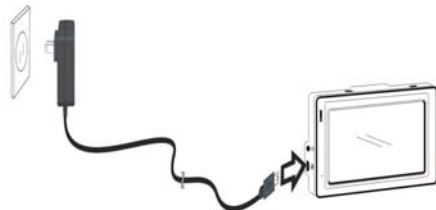


Note:

- Turn unit's power off before unplugging.
- When using the adaptor, the LCD screen will be brighter than with the rechargeable battery.

Using the Car Adaptor

The unit is supplied with a Car Adaptor for powering while in a vehicle.

 Connect the Car Adaptor Power Plug to the unit's USB port and plug the other end to the vehicle's 5V accessory/ cigarette socket, as shown on the right figure.

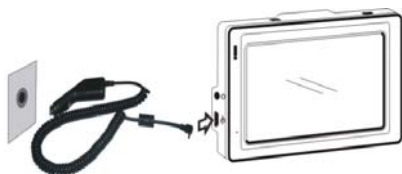

Attention

- Do not operate the unit while driving a vehicle.
 - Place the unit in a proper position for viewing.
 - Disconnect the unit from the Car Adaptor when starting the vehicle.
- Your portable GPS unit comes with a built-in rechargeable battery. Please see details in the following segment.



Power Supply Preparation

About Rechargeable Battery

Your portable GPS device comes with a built-in rechargeable battery. Charge the battery fully before initial use. Charging time is normally about 3.5 hours. A fully charged battery delivers about 2 hours of use.

Working conditions and precautions for the rechargeable battery

- New batteries should be fully charged before initial use.
- Battery should only be used and charged when temperatures are between 32°-100°F.
- Maintain well-ventilated conditions around the product to avoid overheating. Don't put the product on a bed, sofa or anything that may block ventilation to the product.
- When the battery is weak, an indication menu will appear on the LCD screen and the unit will power off automatically after a while.

 
Charging the rechargeable battery

The battery must be charged by using the supplied adaptor.


General Setup

System Main Menu

When in navigation mode, Tap **MENU** button, and then choose **SETTINGS**.

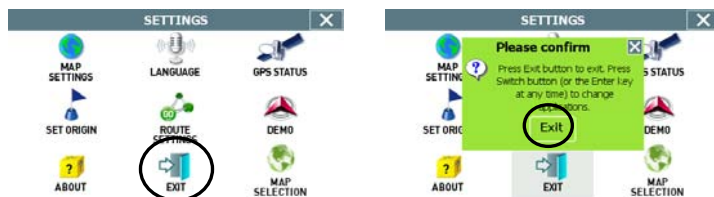

 In the **SETTINGS** menu, tap **EXIT**, a confirmation message appears. Tap **Exit** in the confirmation message to return to the system main menu, as shown below.

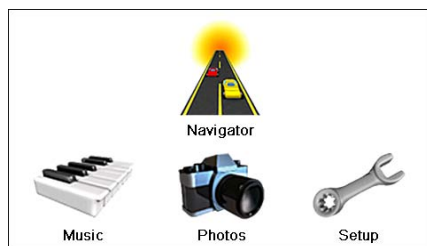

In the main menu, there are four items for selecting. Touch the corresponding item to enter.

 
- Tap  to enter the Navigator.
- Tap  to enter the MP3 Player.
- Tap  to enter the Photo Viewer.
- Tap  to enter the Setup menu.

General Setup

Setup Menu




In the main menu, tap  to enter the Setup menu, the screen will display as below:

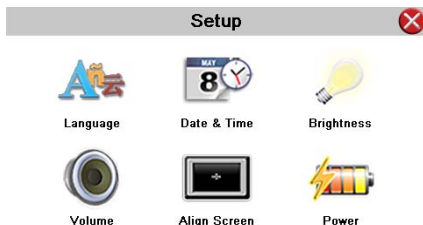




In the Setup menu, tap  to return to the main menu.

 Language

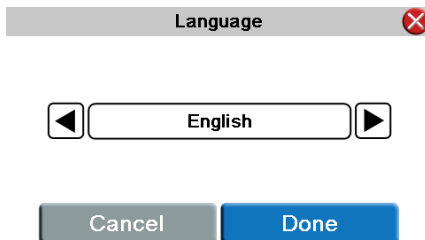

Tap  in the Setup menu to enter **Language** setting menu for language selection, as shown below:



Tap ,  buttons to select language.

 
Then tap  to confirm or tap  to cancel.

General Setup

Date & Time



Tap **Date & Time** in the Setup menu to enter **Date & Time** setting menu for changing to the current time zone, date and time, as shown below:

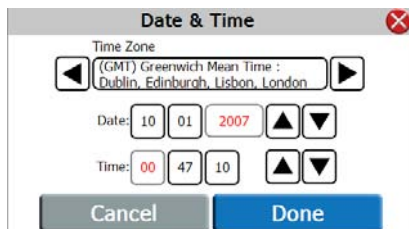

Tap the ◀ ▶ buttons to select the proper Time Zone.

Tap the ▲ ▼ buttons of Date group to change the corresponding date.

 
Tap the ▲ ▼ buttons of Time group to change the corresponding time.

Then tap **Done** to confirm or tap **Cancel** to cancel.

Brightness



Tap **Brightness** in the Setup menu to enter **Brightness** setting menu for backlight adjustment, as shown below:

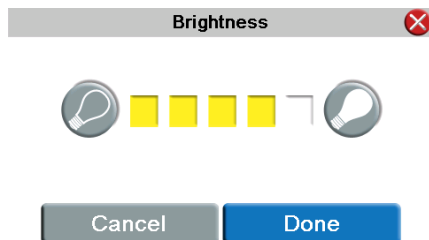

Tap ◀, ▶ to decrease or increase the brightness of the display.

 
After setting, tap **Done** to confirm or tap **Cancel** to cancel.

General Setup


Volume



Tap **Volume** in the Setup menu to enter **Volume** settings menu for volume adjustment, as shown below:

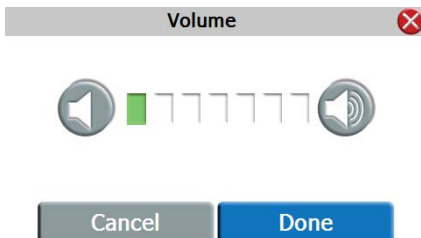

Tap the  to decrease the volume.

 
Tap the  to increase the volume.

Then tap  to confirm or tap  to cancel.

Align Screen



Tap **Align Screen** in the Setup menu to align the screen, as shown below.

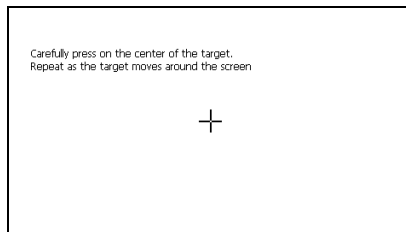


Tap the center of the cross with your finger or stylus. When the cross moves to another position, tap and hold the center of the new target. Repeat each time to complete the calibration process. The new settings will be stored and you are returned to the Display menu.

General Setup

Power



 Tap **Power** in the Setup menu to enter **Power** menu, as shown below:

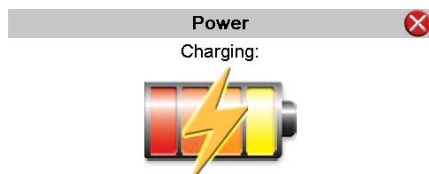

The Power menu displays the unit's battery status. The values are between 0% and 100%, where 0% means the battery power has run out completely, and 100% represents a full battery power. When the battery is being charged, the Battery Status will be "Charging".

Playing Music

The unit is designed with an SD card slot and supports MP3 and WMA format files playback. To use the music player, you will need to have an SD card with your MP3 music files preloaded. Please note that you cannot use the navigation function of the device at the same time you are using the music player. Remove the mapping software SD card that comes with the device from the SD card slot on the side of the unit. Then insert your SD card with your MP3 or WMA music files.

Note: Please take care of the mapping SD card if you remove it to use the Music Player as the navigation function will not work without it.

Warning: For your own safety, do not use the earphones when driving.

A note regarding the music playing function:

The unit has the ability to play your favorite music files. This is accomplished by using the unit's SD card slot, located on the right side.

- Music files should previously reside on the user's SD card.
- Music files can be imported to the user's SD card on a PC, using a variety of programs such as Windows Media Player.
- This process should be performed independent of the navigation unit.

Do not attempt to use the unit to read and burn music files from an external source.

Playing Music




Music

Tap **Music** in the system main menu to enter the Music Player, as shown below:





Playing Music



Tap  button to enter the music play list menu, as shown below:



When you open the play list, the system will look for audio files on its SD memory card and create a play list automatically.


If the play list consists of more than one screen, tap the up arrow for the previous page and the down arrow for the next page.



Tap  /  toggle buttons to determine whether the player will repeat the songs in the play list or not.



Tap  /  toggle buttons to determine whether or not to play the songs in the list randomly.


Tap  to start the playback and return to Music Player, as shown below.



Tap  toggle button to pause or resume the playback.

Tap  to go back to the previous song; tap  to skip to the next song.

Tap  ,  to decrease or increase the volume of the speaker.

Tap the progress bar  to select the desired playback starting point.


Tap  in the top right corner to exit.

Photo Viewer

The unit is designed with an SD card slot and supports JPEG format files playback. To use the Photo Viewer, you will need to have an SD card with your JPEG picture files preloaded. Please note that you cannot use the navigation function of the device at the same time you are using the Photo Viewer. Remove the mapping software SD card that comes with the device from the SD card slot on the side of the unit. Then insert your SD card with your JPEG picture files.

Note: Please take care of the mapping SD card if you remove it to use the Photo Viewer as the navigation function will not work without it.


The unit lags when reading high-resolution JPEG files in the SD Card. We suggest low-resolution (within 640*480) pictures playback.

Playing Photos



Tap **Photos** in the system main menu to enter the Photo Viewer, as shown below:



In the menu, tap  to enter the folder menu, as shown below:


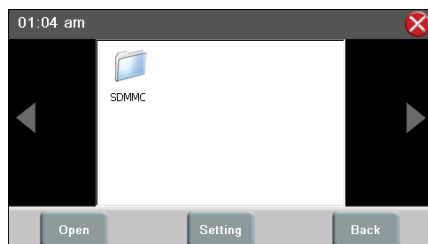 


Photo Viewer

 In the folder menu, double tap the memory card icon, and the photos stored in the memory card will be listed on the screen.

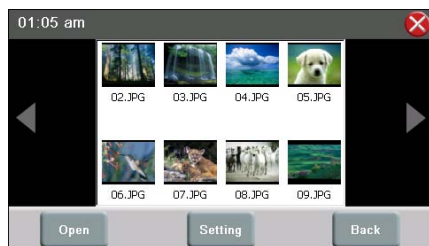

In the photo list, double tap a photo to play it on the LCD screen. You can also tap a photo to select it and then tap **Open** to play it.

Tap **Back** to return to the previous menu.

Tap **Setting** to enter the Setting menu for setting the Slide Show, as shown below.




You can set the slide show on or off to determine whether or not to play photos in slide mode.

When the slide show is on, you can set the interval between two photos during slide show.

Photo Viewer

 When playing photos, the Photo Viewer has following playback features:

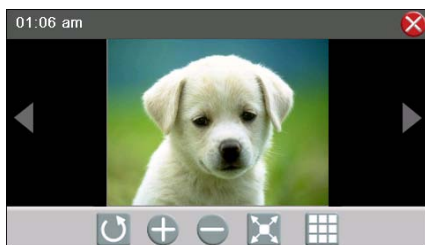

Tap ◀ to go back to the previous photo; tap ▶ to switch to the next photo.

Tap ⌛ to rotate the photo.

Tap +, - to zoom in or out of the photo.

Tap ⌛ to play the photo in full-screen mode; double tap the screen again to return to Photo Viewer.

Tap 📱 to return to the photo list.

Use of the Mount Accessories

When using the unit in vehicle, you can use the supplied mount accessories (mount bracket, mount cradle and dashboard mount disk) to mount the unit in the vehicle. Take the following steps to operate:



Fig. 1



Fig. 2



Fig.3

1. See Fig. 1 Follow arrow 1 - slide the mount cradle to fix it to the mount cradle
2. See Fig. 2 Set the bottom edge of the unit onto the mount cradle.
3. See Fig. 3 Fix the unit on the mount cradle, then press the suction cup to the windshield . Follow arrow 2 - rotate the suction cup lever. At the end, rotate the knob to adjust the unit to a proper position.

If you want to mount the unit to the dashboard, you can use the adhesive disk:

- 1) Choose a clean, dry spot on your dashboard.
- 2) Peel off protection liner from the back of the disk.
- 3) Attach the disk to your dashboard.
- 4) Mount the bracket to the adhesive disk.

Troubleshooting

Take steps described in the tables below to solve simple problems before contacting customer service.

If you suspect something is wrong with this unit, immediately turn the power off and disconnect the power connector from the unit. Never try to repair the unit yourself because it is dangerous to do so.

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
User can't turn the unit on.	The adaptor is not correctly connected.	Connect the adaptor correctly.
	The built-in rechargeable battery is weak.	Use the adaptor to supply power or charge the battery.
There is no sound.	The volume may be turned down or mute.	Turn up the volume or turn on the sound output.
Dim screen.	The brightness may be turned down.	Adjust the brightness of the LCD.
The unit can't receive satellite signals or can't orient.	The unit may be obstructed by buildings or metal block.	Make sure to use the unit out of room.

Troubleshooting

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
The unit can receive signals now but can't then or signals received are not stable.	The built-in rechargeable battery is weak.	Use the adaptor to supply power or charge the battery.
	The unit may be obstructed by veil, such as heat insulation paper.	Remove the veil.
	Swing of the unit is too great.	Avoid great swing of the unit.
	System software of the unit fails to function after a change.	Turn the unit on again.

Other possibilities:

Static or other external interference may cause the unit to function abnormally. In order to recover normal status, please unplug the power supply cord and then plug it into the outlet again to reset the unit. If the problems still exist, please cut off the power supply and consult your service center or a qualified technician.

Specifications

TFT screen size	4.3 inches
Frequency Response	20Hz - 20kHz
Audio Signal-to-noise Rate	$\geq 65\text{dB}$
Audio distortion+noise	$\leq -20\text{dB}$ (1kHz)
Channel Separation	$\geq 70\text{dB}$ (1kHz)
Dynamic Range	$\geq 80\text{dB}$ (1kHz)
Power	AC 100-240V \sim 50/60Hz ; DC 5V
Power Consumption	$< 8\text{W}$
Dimensions	123mmX80mmX20mm (L*W*D)
Weight	About 0.17Kg

Design and specifications are subject to change without notice.

© 2008 Nextar (Hong Kong) Limited. Nextar is a trademark and service mark of Nextar (Hong Kong) Limited. All other brand names, trademarks and service marks are property of their owners.

Nextar may find it necessary to modify, amend or otherwise change or update this manual.

We may reserve the right to do this at any time, without any prior notice.

All specifications and features are subject to change without notice.

www.nextar.com

Or write us at:

Nextar Inc.

1661 Fairplex Dr.

La Verne, CA91750

USA